



# AMERICAN FLOOR PRODUCTS COMPANY, INC.

AFCO-USA

P.O. BOX 7055 • Gaithersburg, Maryland 20898 -7055 • 301-987-0490 • Fax 301-987-0422  
email: sales@afco-usa.com • Web Site: www.afco-usa.com

## INSTALLATION INSTRUCTIONS

### Impact Protection Systems SPECIALTY CORNER GUARDS:

#### **ELECTRA® (CG-2144)**

*(Adhesive, double faced tape, or metal screws must be specified.)*

##### **1. Adhesive or Tape:**

Install with ADH-30-1 adhesive 120 sq. ft. per gallon with (3) coats (2) coats on wall and (1) coat on the corner guard or double faced tape (ADH-4042).

ADH-30-1 recommended for painted drywall and plaster surfaces.

Allow to dry until tacky and install by working from floor to ceiling.



When applying over unpainted drywall, it is important to seal the wall boards with a wallpaper "sizing".

When installing Electra® (CG-2144), over vinyl wall covering, remove vinyl wall covering before installation.

##### **2. With Screws (or anchors if required):**

Rigid vinyl Corner Guards will be supplied with (6) countersunk holes per length and 1-1/2" oval head screws for drywall installations. For masonry installations, 1" oval head countersunk screws with Toggler Alligator®, or similar plastic anchors should be used.

***For tape installations, remove protective paper and install from the floor upward.***

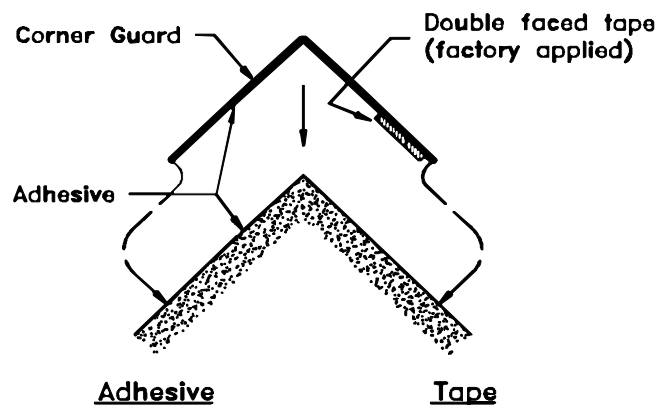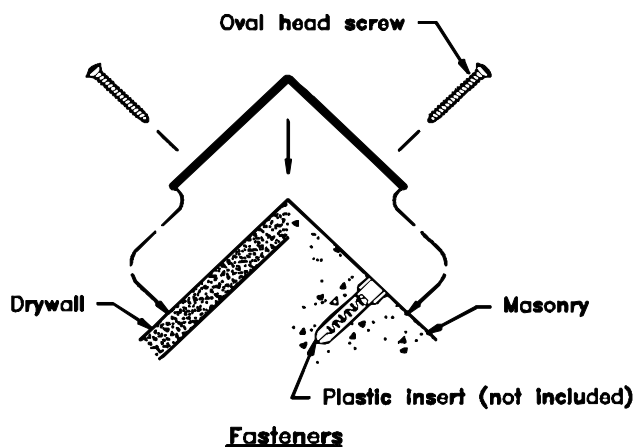

*Specifications subject to change without notice.*